



OPTION 1

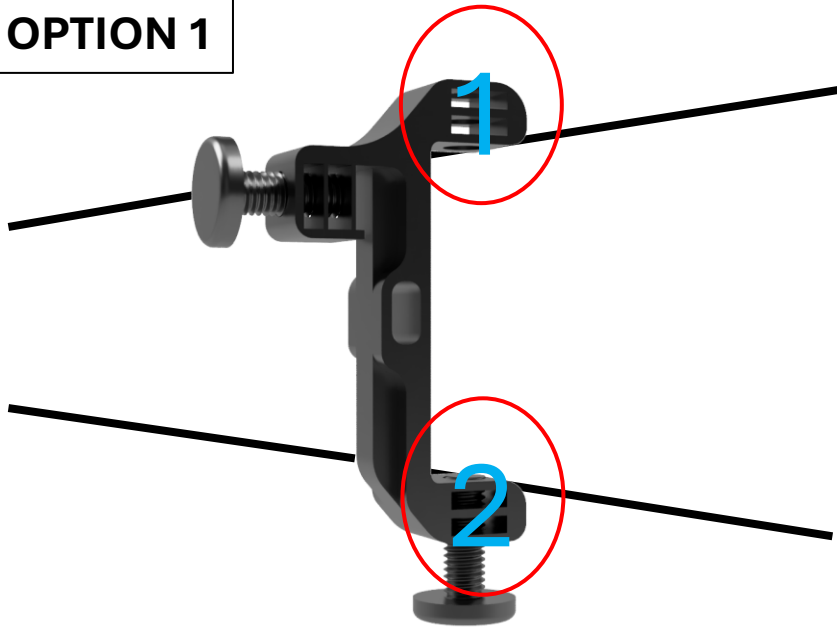

Attach the mesh by placing it against the panel and then sliding the clamp over the frame. Fasten the top and bottom screws (1 & 2). Standard 5mm machine screws may also be used.

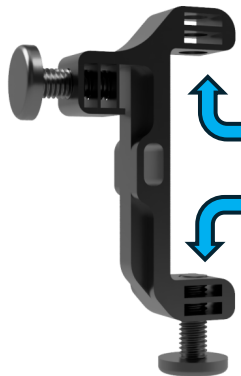

Always insert a 10mmx10mm rubber foam square between the screw and the surface.

OPTION 2



Attach the mesh by placing it against the panel and then sliding the clamp in below the frame. Attach it to the bottom of the frame by fastening the front and back screws (1 & 2). Standard 5mm machine screws may also be used.